


# TRANSMISSION OIL REPLACEMENT [Y16M-D]

BHE051127001W04


1. Position the vehicle on level ground.
2. Remove oil filler plug and drain plug, and then drain the oil.

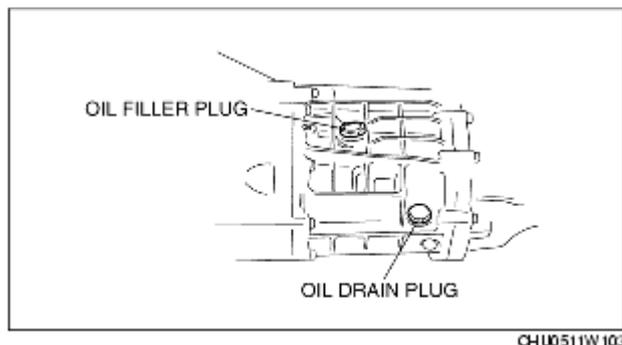

3. Clean drain plug.
4. Install drain plug and a new washer.

**Tightening torque**  
**27-48 N·m {2.8-4.9 kgf·m, 20-35 ft·lbf}**

5. Add the specified amount and type of oil through the plug port for oil filler plug to near the brim of the port.

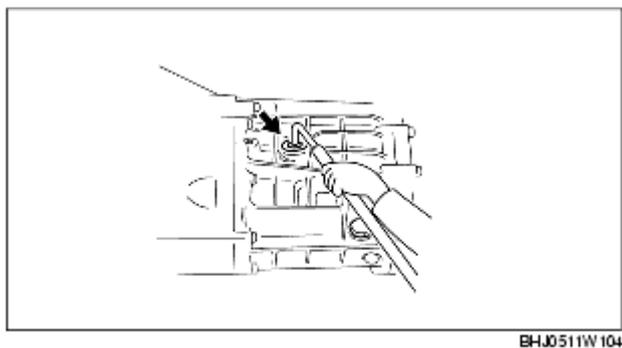

**Specified oil grade**  
**API Service GL-4 or GL-5**  
**Specified oil viscosity**  
**SAE 75W-90**  
**Capacity (approx. quantity)**  
**1.75 L {1.85 US qt, 1.54 Imp qt}**

6. Install oil filler plug and a new washer.

**Tightening torque**  
**27-48 N·m {2.8-4.9 kgf·m, 20-35 ft·lbf}**