


TRANSMISSION OIL REPLACEMENT [R15M-D]

BHE051127001W02


1. Position the vehicle on level ground.
2. Remove the drain plugs (A with packing, and B), then drain the oil.

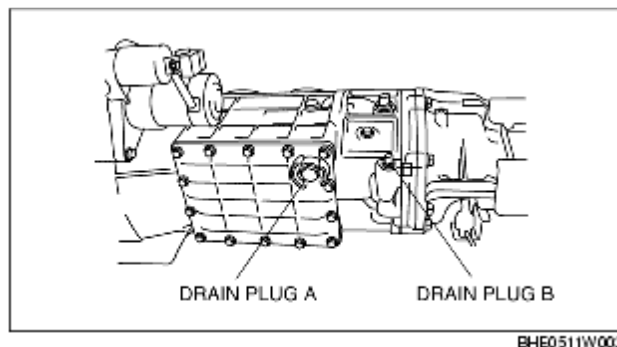

3. Clean drain plugs A and B.
4. Apply sealant to the threads of drain plug B.
5. Install drain plug A with new packing, and drain plug B.

Tightening torque**A: 39-59 N·m {4.0-6.0 kgf·m, 29-43 ft·lbf}****B: 21-31 N·m {2.2-3.1 kgf·m, 16-22 ft·lbf}**

6. Remove the filler plug, then add the specified amount and type of oil to near the brim of the plug port.

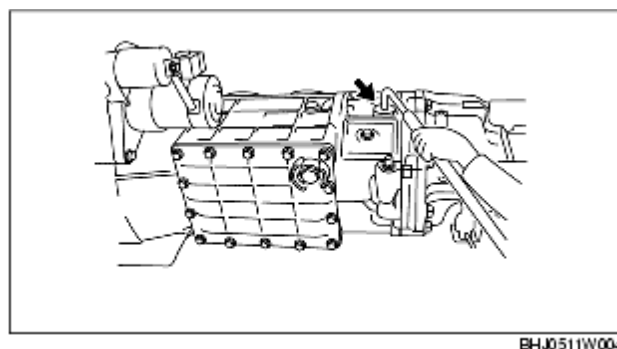**Specified oil****API GL-4 or GL-5****All season : SAE 75W-90****Above 10°C {50 °F}: SAE 80W-90****Capacity (approx. quantity)****2.5 L {2.6 US qt, 2.2 Imp qt}**

7. Install a new filler plug.

Tightening torque
25-39 N·m {2.5-3.9 kgf·m, 18-28 ft·lbf}